

**Upravljačke glave tastera
IP 67, 69K**



Boja tastera	Taster ravni bez blokade	Taster ravni s blokadom	Taster uzdignuti bez blokade	Taster uzdignuti s blokadom
	M22-D-S 216 590	M22-DR-S 216 613	M22-DH-S 216 636	M22-DRH-S 216 663
	M22-D-W 216 592	M22-DR-W 216 615	M22-DH-W 216 638	M22-DRH-W 216 665
	M22-D-R 216 594	M22-DR-R 216 617	M22-DH-R 216 641	M22-DRH-R 216 667
	M22-D-G 216 596	M22-DR-G 216 619	M22-DH-G 216 643	M22-DRH-G 216 669
	M22-D-Y 216 598	M22-DR-Y 216 621	M22-DH-Y 216 646	M22-DRH-Y 216 671
	M22-D-B 216 600	M22-DR-B 216 623	M22-DH-B 216 649	M22-DRH-B 216 673
	M22-D-R-X0 216 605	M22-DR-R-X0 216 628	M22-DH-R-X0 216 655	M22-DRH-R-X0 216 675
	M22-D-G-X1 216 607	M22-DR-G-X1 216 630	M22-DH-G-X1 216 657	M22-DRH-G-X1 216 677
	M22-D-S-X0 216 609	M22-DR-S-X0 216 632	M22-DH-S-X0 216 659	M22-DRH-S-X0 216 679
	M22-D-W-X1 216 611	M22-DR-W-X1 216 634	M22-DH-W-X1 216 661	M22-DRH-W-X1 216 681
bez	M22-D-X 216 602	M22-DR-X 216 625	M22-D-X 216 602	M22-DR-X 216 625
bez sočiva sa zaštit. prstenom	M22-DG-X 220 921			